

## ***B - HOW TO WINTERIZE A JET PUMP***

1. Turn off power supply to your pump.
2. Open a faucet to drain water from tank.
3. Drain water from pump by opening drain plug on bottom side of pump housing.
4. Before using pump again, replace drain plugs and manually re-prime the pump.

**IMPORTANT:** Freezing causes the casing to crack and is not covered under warranty.

